

## UNLOADING THE ROTTERA 2310 TANK

You will need:

- 2 x FORKLIFT
- CONSTRUCTION STRAP / SLINGS



Procedure:

Extensions of the tank are freely loaded on top of the tank. First remove them out of the truck. With the forklift get behind the truck and slowly insert the forks under the tank. On the yellow marked place on the tank attach the strap with the one end and the other end on the forklift. Lift the tank for around 5-10 cm, and pull the tank out (slowly drive reverse) till last 2 meters of the tank. With the other forklift get near to the truck and lift the other side of the tank for few cm. With the truck slowly move away.



*In the case the other forklift will be replaced with excavator, attach another strap all around the tank (on the side which is near truck), and lift it a little. The truck can slowly move away.*

*For the detailed unloading please check the loading video which is the same just reversed.*

*Thank you*



## **UNLOADING THE ROTTERA 2450 TANK WITH EXCAVATOR**

You will need:

- EXCAVATOR
- CONSTRUCTION STRAPS / SLINGS




Procedure:

Open the top and side wall of the truck. Remove the extensions which are freely loaded on top of the tank.

Attach the lifting slings on four (4) locations which are marked on the tank. (Marks (4) are on both side of the tank).

With the Excavator slowly lift the tank (picture 2 below)

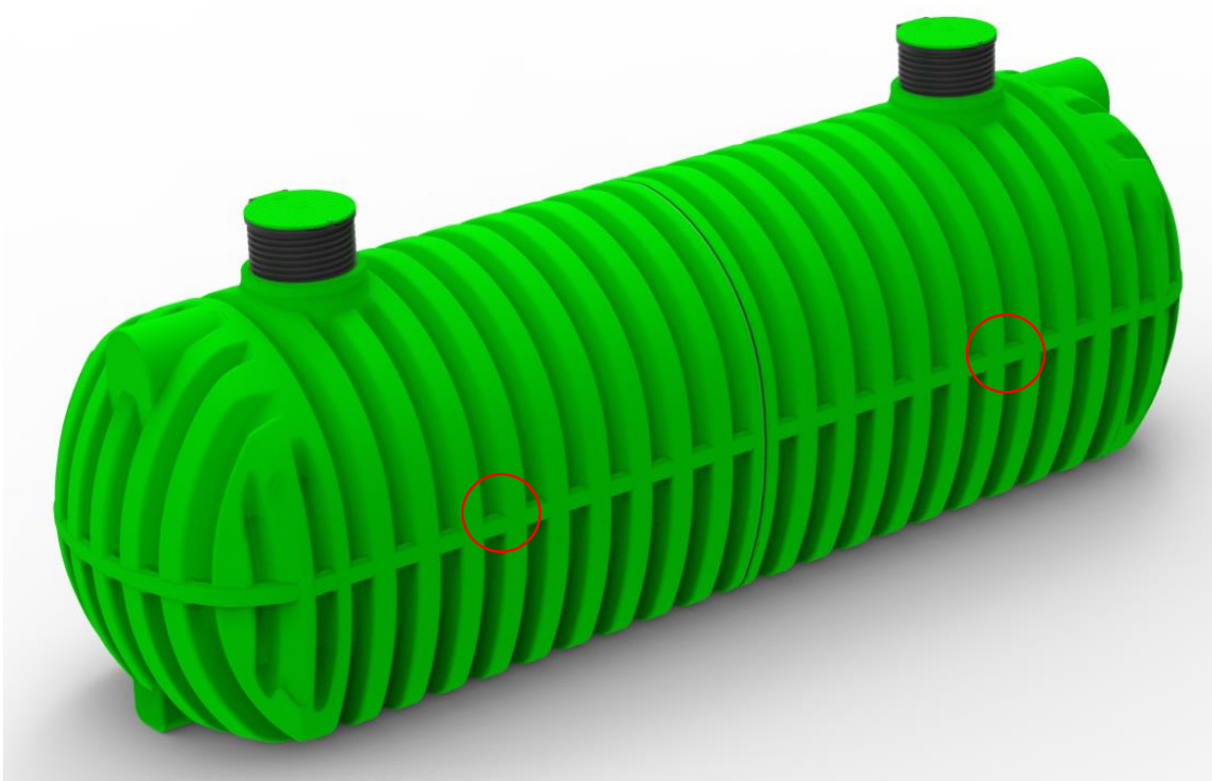

Picture 1 (Location of the lifting locations must be marked on the tank)





Picture 2 (Lifting the tank with 4 Slings and excavator.